Release Notes for PathPilot® v2.1.3

July 2018

FIXED ISSUES

Lathe/RapidTurn

• We fixed an issue that was introduced in PathPilot[®] v2.1.1 where constant surface speed (CSS) wasn't working correctly in both G96 and the CSS DRO field (PP-2199)



TORMACH.COM

Page 1

RELEASE NOTES

PathPilot® Updates

NOTE: You don't need to install updates sequentially. Install the latest PathPilot[®] update file to be completely up-to-date.

To update and manage versions of PathPilot[®] on the controller, you can do any of the following:

- "Download and Install an Update File" (below)
- "Install an Update File from a USB Drive" (below)

2.1 DOWNLOAD AND INSTALL AN UPDATE FILE

 NOTE: Downloading and installing an update file requires
an Internet connection. Make sure that the Internet button LED light is on.

- Make sure that the PathPilot[®] controller is powered on and out of **Reset** mode.
- From the PathPilot[®] interface, on the Status tab, click Update.



Figure 2-1: Update button on the Status tab.

3. From the **Software Update** dialog box, click **Check Online**.



Figure 2-2: Software Update dialog box.

4. Click Install.



Figure 2-3: Install button on the Software Update dialog box.

The update file is downloaded.

5. From the dialog box, click OK.

4	Software Update	×
Check online for latest	updates	Check Online
PathPilot v2.0.4 - Fixe Tool Changer (ATC)	ed additional issues in relation to the new PCNC 440 Automatic USB interface chip.	Install
	Update downloaded successfully. Click OK to install.	
Update using file on	ОК	Browse

Figure 2-4: OK button on the dialog box.

The update file is installed on the PathPilot® controller.

 Follow the instructions on the screen to restart the PathPilot[®] controller.

2.2 INSTALL AN UPDATE FILE FROM A USB DRIVE

- From tormach.com/pp-updates, download the most recent PathPilot[®] update file.
- 2. Transfer the PathPilot® update file to a USB drive.
- 3. Insert the USB drive into the PathPilot® controller.
- Make sure that the PathPilot[®] controller is powered on and out of **Reset** mode.

RELEASE NOTES

 From the PathPilot[®] interface, on the Status tab, click Update.



Figure 2-5: Update button on the Status tab.

6. From the **Software Update** dialog box, click **Browse**.

Check Online
ation
Browse
Close

Figure 2-6: Software Update dialog box.

7. From the Browse dialog box, click USB.



Figure 2-7: Browse dialog box.

8. Select the desired update file. Then, click Update.



Figure 2-8: Update button.

The update file is installed on the PathPilot[®] controller.

 Follow the instructions on the screen to restart the PathPilot[®] controller.