

INSTALLATION GUIDE

PATHPILOT OPERATOR CONSOLE ASSEMBLY FOR 1100M/1100M+/1100MX

TECHNICAL DOCUMENT

1.1 PURPOSE

This document gives instructions on installing the PathPilot Operator Console Assembly for 1100M/1100M+/1100MX.

1.2 PRODUCT INFORMATION

Product: PathPilot Operator Console Assembly for 1100M/1100M+/1100MX (PN 50440)

Quantity	Description
1	Controller Enclosure Mount (PN 39308)
1	Controller Wire Kit (PN 50367)
1	Jog Pendant (PN 50363)
1	Machine Controller



Note: If any items are missing, we can help. Email support@tormach.com to contact Tormach Technical Support for guidance on how to proceed.

1.3 REQUIRED TOOLS

This procedure requires the following tools. Collect them before you begin.

- 15/64 in. drill bit
- Electric drill
- Hole punch
- Level
- Metric hex wrench set
- Phillips screwdriver
- Phillips screwdriver, small
- Scissors
- Tape

1.4 BEFORE YOU BEGIN

- **Machine Arm Not Compatible** If you already have a machine arm installed on your machine, you must first disassemble it. Refer to the product's documentation, and follow the steps in reverse order.
- **Machine Enclosure Required** If you haven't yet done so, you must first install the machine's enclosure. See the product's documentation for more information.

2.1 PREPARE THE MACHINE

1. Power off the machine and the PathPilot controller.
 - a. Push in the Emergency Stop button on the operator box, which removes power to motion control.
 - b. From the PathPilot interface, select **Exit**.
 - c. Turn the Main Disconnect switch to **OFF** on the side of the electrical cabinet.
2. Close the enclosure doors.

NOTICE! This procedure requires you to drill four holes into the enclosure. If the enclosure's right door is open, there's a risk that you'll drill into it.

2.1.1 Remove the Right Side Window

- To make it easier to install the mount arm, we recommend removing the right side window from the enclosure. Loosen the screws on the vertical window retainers, and slide the window out of the right side panel. Set the window aside.

2.1.2 Remove the Operator Box

1. Remove the Emergency Stop cable from the operator box.
2. Remove the four screws that secure the operator box to the machine stand using a 3 mm hex wrench. Discard the operator box.
3. Put the four screws from the operator box back on to the machine stand.

2.2 INSTALL THE MOUNT ARM

1. Find the drill template (provided), and cut it out along its edges.
2. Find the operator console's mount arm.
3. Put the drill template on the mount arm's top bracket. Then, verify that the holes on the bracket align with the holes on the drill template. If they don't, trace the correct hole pattern on to the drill template.
4. Align the drill template to the top of the enclosure and tape it in place, as shown in the following image.

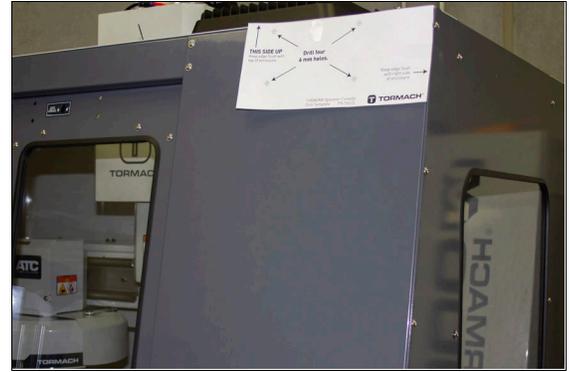


Figure 2-1: Drill template taped to the enclosure.

5. Put a mark in each hole on the drill template using a hole punch.
6. Remove the drill template from the enclosure and discard it.
7. Drill into the marks on the enclosure that you made in Step 5 using an electric drill and a 15/64 in. drill bit.



Figure 2-2: Drilling holes into the top of the enclosure.

8. Secure the top of the mount arm to the enclosure with four M6 screws, four washers, and four nuts using an M3 hex wrench.



Figure 2-3: Securing the top of the mount arm to the enclosure.

TECHNICAL DOCUMENT

- Using a level, align the bottom of the mount arm with the bottom of the enclosure.



Figure 2-4: Bottom of the mount arm level on the enclosure.

- Using the bottom of the mount arm as a template, drill one hole using an electric drill and a 15/64 in. drill bit.
- Put one M6 screw, one washer, and one nut into the hole that you drilled in Step 10 using an M3 hex wrench. The mount arm is now secure enough to reliably drill the remaining three holes.
- Drill the remaining three holes for the mount arm's bottom bracket.



Figure 2-5: Drilling the remaining three holes into the enclosure.

- Put three M6 screws, three washers, and three nuts into the remaining three holes using an M3 hex wrench.
- Once the mount arm is secured to the enclosure, open the enclosure door and verify that the mount arm's screws don't interfere with the enclosure door jamb. If they do, loosen the screws on the door jamb, and slide it toward the back of the machine.

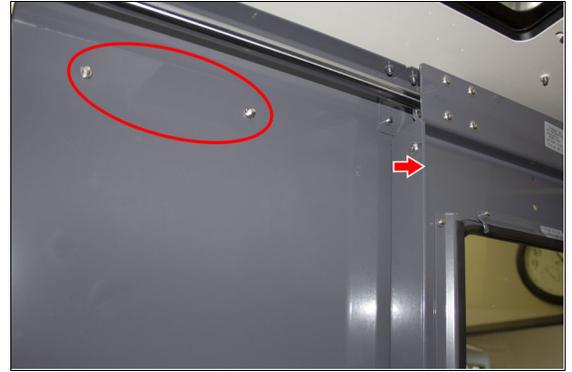


Figure 2-6: Door jamb moved to provide clearance for the mount arm's screws.

2.3 MOUNT THE CONSOLE

Complete the following steps in the order listed:

2.3.1 Assemble the Controller and Keyboard Tray.....	4
2.3.2 Lift and Secure the Controller Assembly.....	5

2.3.1 Assemble the Controller and Keyboard Tray

- Find the three provided split collars. If they're connected, remove their bolts using a 6 mm hex wrench, and separate them. The split collars are matched pairs, so you must keep them together.



Figure 2-7: One split collar disassembled.

- Find the four provided pieces of plastic with adhesive backing. Cut each piece of plastic so that it's the length of the inside of the split collar.

TECHNICAL DOCUMENT

3. Adhere one piece of plastic to the inside of each split collar.



Figure 2-8: Adhering tape on the inside of a split collar.

4. Find the three provided mount arm brackets.



Figure 2-9: Mount arm brackets.

5. Loosely attach two of the mount arm brackets to the left side of the controller with four M4 screws using a 2.5 mm hex wrench, as shown in the following image. Verify that the curved edge is facing away from the controller.



Note: Don't completely tighten the brackets to the controller. You'll adjust them when you're adjusting the height of the entire console assembly.

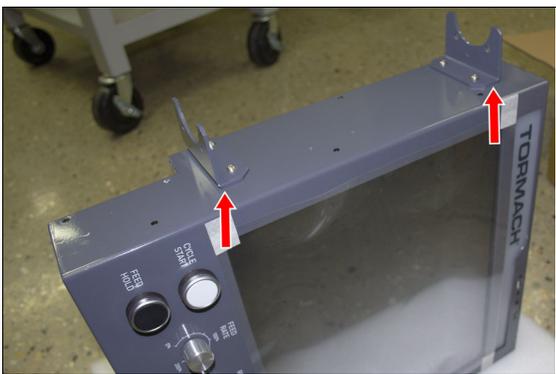


Figure 2-10: Two mount brackets attached to the controller.

6. Attach one side of two split collars to the mount arm brackets with four M6 screws and four washers using a 3 mm hex wrench.



Figure 2-11: Split collars attached to the mount arm brackets on the controller.

7. Find the keyboard tray provided. Then, attach the remaining mount arm bracket to the left side of the keyboard tray with two M4 screws using a 2.5 mm hex wrench. Verify that the curved edge is facing away from the keyboard tray.
8. Attach one side of one split collar to the mount arm bracket with two M6 screws, two washers, and two nuts using a 3 mm hex wrench.

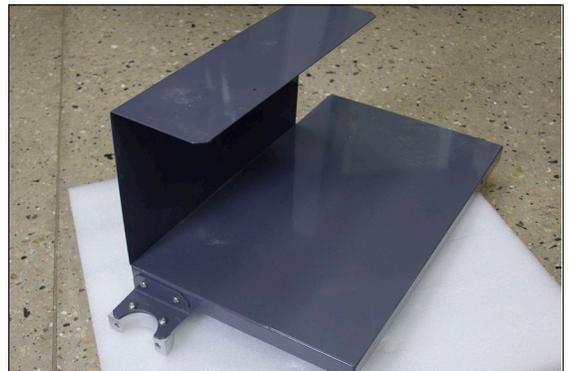


Figure 2-12: Split collar attached to the mount arm bracket on the keyboard tray.

9. Find the provided jog pendant bracket. Then, attach it to the left side of the controller (between the two mount arm brackets) with two M4 screws using a 2.5 mm hex wrench.
10. Set the keyboard tray aside.

2.3.2 Lift and Secure the Controller Assembly

1. Attach the remaining split collar to the mount arm, and completely tighten it using a 6 mm hex wrench. This split collar determines the height for the overall console assembly,

so we suggest attaching it 16-1/2 in. from the top of the enclosure.



Figure 2-13: Split collar attached to the mount arm.

⚠ CAUTION! Team Lift Required: You must have the aid of more than one person to lift and move the object. The object is heavy, and lifting it by yourself can cause serious injury.

2. Lift the console and hold it on the right side of the mount arm.
3. Align the bottom split collar on the controller with the split collar that you installed on the mount arm in Step 1.
4. With the aid of another person, loosely attach the opposite side of both split collars to the mount arm using a 6 mm hex wrench.



Figure 2-14: Loosely attaching the split collars to the mount arm.

5. Find the keyboard tray that you set aside earlier. Then, attach it to the bottom of the controller, as shown in the following image.



Figure 2-15: Attaching the keyboard tray to the bottom of the controller.

6. Loosely attach the opposite side of the split collar to the mounting arm using a 6 mm hex wrench.
7. Adjust the height and the angle of the console assembly as required.
8. Securely tighten all four split collars using a 6 mm hex wrench. Securely tighten all mount arm brackets using a 2.5 mm hex wrench.

2.4 MAKE ELECTRICAL CONNECTIONS

1. Find the provided Jog Pendant (PN 50363).
2. Hang the jog pendant on its bracket (on the front of the controller) as shown in the following image.



Figure 2-16: Jog pendant on the front of the console assembly.

3. Route the loose end of the jog pendant to the back of the controller.
4. Find the provided power supply bracket. Then, attach it to the back of the controller with two M3 screws using a 2.5 mm hex wrench.

TECHNICAL DOCUMENT

- Find the provided power, Ethernet, emergency stop extension, and ATC USB cables, and the WiFi dongle. Then, connect them – and the jog pendant cable – to the controller as shown in the following image.

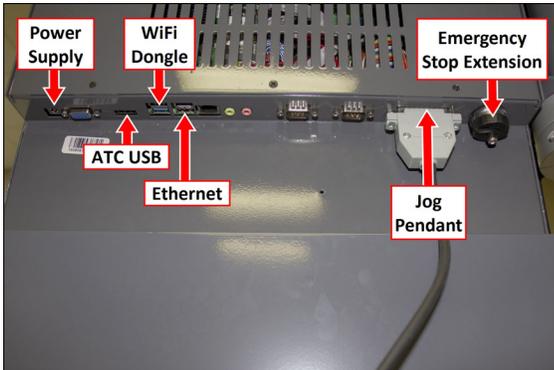


Figure 2-17: Controller connections.

- Put the power supply into the power supply bracket.
- Find the provided corrugated tubing and piece of rubber.
- Attach the piece of rubber to the bracket on the rear of the keyboard tray as shown in the following image.



Figure 2-18: Rubber attached to the bracket on the keyboard tray.

- Put the loose ends of all cables from the controller into the corrugated tubing.
- Push the corrugated tubing into the bracket on the rear of the keyboard tray.

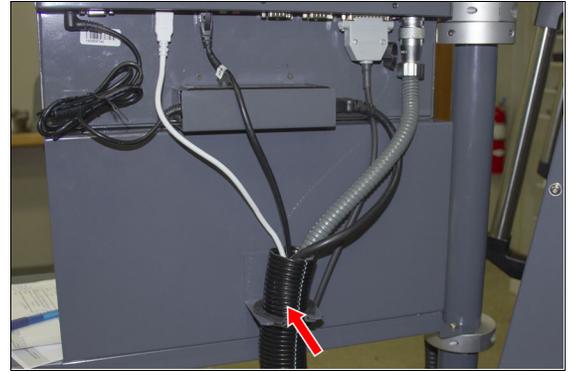


Figure 2-19: Cords put into corrugated tubing, which is attached to the rear of the keyboard tray.

- Find the access panel on the machine stand as shown in the following image.



Figure 2-20: Access panel on the machine stand.

- Remove the access panel using a 2 mm hex wrench, and discard the panel. Set the screws aside for later in this procedure.
- Find the provided access panel. Then, put the loose end of the corrugated tubing and all cords through it as shown in the following image.



Figure 2-21: Loose end of corrugated tubing and all cords put through the access panel.

TECHNICAL DOCUMENT

14. Attach the access panel – with the corrugated tubing and all cords – to the machine stand with the screws that you set aside in Step 12 using a 2 mm hex wrench.



Figure 2-22: Access panel attached to the machine stand.

15. Route the loose end of all cords through the machine stand and out toward the rear of the machine.
16. Connect the operator box extension cable to the existing operator box cable (preinstalled on the machine).
17. Connect the Ethernet cable to the Controller Communications port on the side of the electrical cabinet.
18. From the ATC, remove and discard the existing USB cable. Then, route the loose end of the ATC USB cable from the controller to the ATC, and connect it in place of the original USB cable.
19. If you have an EU model of the PathPilot Operator Console Assembly for 1100M/1100M+/1100MX, find the provided set of keys, and put it into the top of the controller.

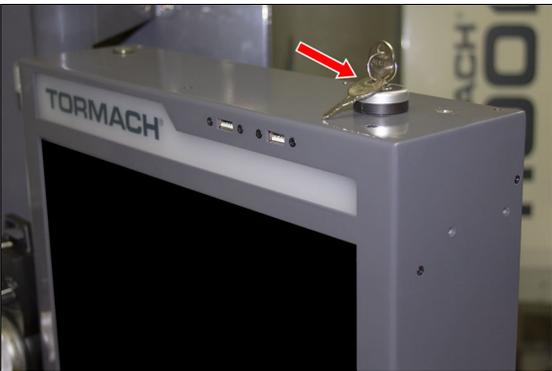


Figure 2-23: Key put into the controller.

For more information on operation modes, refer to the EU machine operator's manual.

enclosure. Then, tighten the screws on the vertical window retainers

2. Power on the machine and the PathPilot controller.
 - a. Turn the Main Disconnect switch to **ON** on the side of the electrical cabinet.
 - b. Twist out the Emergency Stop button on the operator box, which enables movement to the machine axes and the spindle.
 - c. Press the Reset button on the operator box.
 - d. Bring the machine out of reset and reference it.

2.5 REASSEMBLE THE MACHINE

1. Put the right side window (that you set aside in "Prepare the Machine" (page 3)) back into the right side panel on the

TECHNICAL DOCUMENT

2.6 TROUBLESHOOTING

Problem

The touch screen does not respond to touch inputs on all or part of the screen's surface.

Cause

The sensitivity setting for the touch controller is too low.

Solutions

You Might Need To...	Probability	How-To Steps	Need More?
Adjust touchscreen sensitivity.	High	<ol style="list-style-type: none">1. Verify that you have PathPilot v2.4.4 or higher installed on your console.2. From the PathPilot interface, in the MDI Line DRO field, type <code>ADMIN TOUCHSCREEN SENSITIVITY 1000</code> and press Enter. You can use a value between 1 and 2047, but 1000 is generally sufficient for most shop spaces.	The touchscreen used in the operator console is a resistive type, to prevent accidental triggering from drops of coolant on the screen. The resistive touchscreen may need its sensitivity adjusted when used in a shop space with very high or low humidity.

TECHNICAL DOCUMENT

Problem

The console screen doesn't display an image or respond to the power button.

Cause

The console isn't receiving power.

Solutions

You Might Need To...	Probability	How-To Steps	Need More?
Examine power input to the console.	High	➤ Examine the green LED on the power brick for the console. If it's not lit, examine the power cords to the power brick.	If your console receives power from the Accessory Input ports on the machine, look for tripped breakers inside your machine's electrical cabinet.
Test the power button functionality.	Low	➤ Examine the green ring around the power button. It should light up when you press the power button.	

TECHNICAL DOCUMENT

Problem

The console screen turns on, but is scrambled or illegible.

Cause

The BIOS isn't configured for the correct screen output.

Solutions

You Might Need To...	Probability	How-To Steps	Need More?
Configure the display output settings in BIOS.	High	<ol style="list-style-type: none">1. Connect a VGA monitor to the console2. Power the console on and select the Delete key to enter the BIOS.3. From the Advanced tab, select Display Configuration.4. Configure the display as follows:<ul style="list-style-type: none">• Primary IGFX Boot Display: Auto• LCD Panel Type: 1280x1024 LVDS• Panel Channel: Dual Channel• Panel Color Depth: 24 Bit5. Select the Esc key, go to Save and Exit, and select Save Changes and Reset.	This configuration problem can occur if your console has a CMOS battery failure. Replace the battery if it reoccurs.

TECHNICAL DOCUMENT

Problem

The RPM, Feed Override, or Max Velocity knobs don't respond or aren't smooth.

Cause

The ribbon cable connecting the knobs is disconnected or the circuit board is damaged.

Solutions

You Might Need To...	Probability	How-To Steps	Need More?
Examine the connectors on the ribbon cable.	High	<ol style="list-style-type: none">1. Remove the rear panel of the console.2. Examine the connectors on both ends of the cable going from J4 on the control board to the potentiometer board.	Shipping can sometime cause connectors to become loose. Re-seating the connectors will usually fix non-responsive override knobs.
Examine the USB connection to the control board.	High	<ol style="list-style-type: none">1. Remove the rear panel of the console.2. Examine the USB cable going from the header on the computer motherboard to connector J12 on the control board.	Verify that the power LED on the console control board lights up when the console is turned on. If it doesn't light up, and you have confirmed the USB connection, replace the control board (PN 39146).

TECHNICAL DOCUMENT

Problem


The Cycle Start or Feed Hold buttons don't respond.

Cause

The control board is disconnected or the wires to the buttons are loose.

Solutions

You Might Need To...	Probability	How-To Steps	Need More?
Examine the wiring to the buttons.	High	<ol style="list-style-type: none">1. Remove the rear panel of the console.2. Examine the wire inputs to connector J13 on the control board. If any wires are loose, tighten the screw terminals.3. Using a continuity tester, measure the resistance between terminals 1 and 2 when Feed Hold is pressed and 3 and 4 when Cycle Start is pressed.<ul style="list-style-type: none">• If there's continuity at the terminals on the control board and the buttons still don't work, examine the USB cable to the control board.• If there's not continuity at the terminals when the buttons are pressed, remove the lower rear panel of the console and examine the screw terminals on the rear of the buttons themselves.	<p>Shipping can sometime cause wire terminals to become loose. Re-seating the wires will usually fix non-responsive buttons.</p> <p>If you have tested all terminals and the buttons still don't have continuity when pressed, replace the buttons:</p> <ul style="list-style-type: none">• Feed Hold Button (PN 37363)• Cycle Start Button (PN 37362)
Examine the USB connection to the control board.	High	<ol style="list-style-type: none">1. Remove the rear panel of the console.2. Examine the USB cable going from the header on the computer motherboard to connector J12 on the control board.	<p>Verify that the power LED on the console control board lights up when the console is turned on. If it doesn't light up and you have confirmed the USB connection, replace the control board (PN 39146).</p>

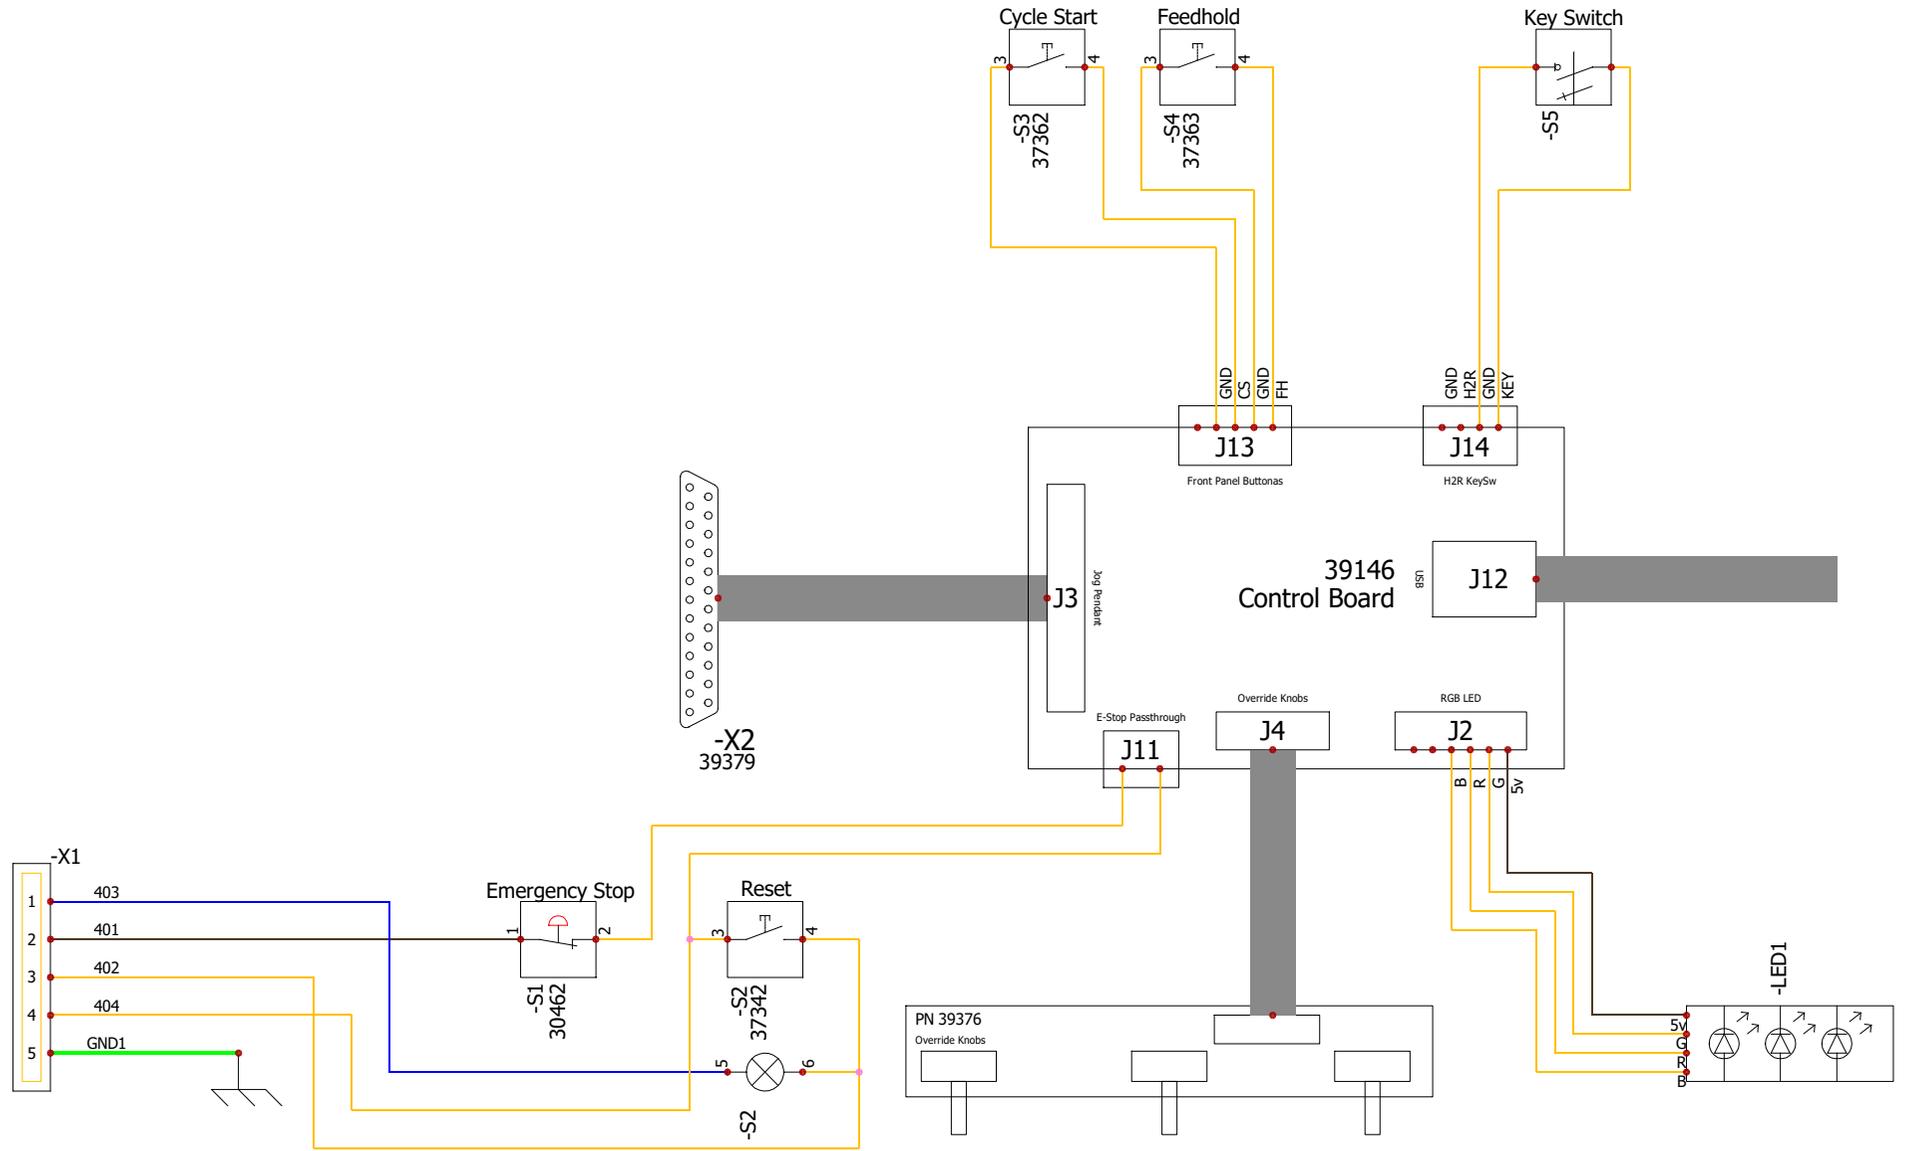

Tormach, Inc
1071 Uniek Dr.
Waunakee, WI 53597

Machine Schematic

				REVISION
				0
0	2/20/2019	pdenhartog		SCHEME
REV.	DATE	NAME	CHANGES	02
User data 1			User data 2	

CONTRACT:

LOCATION: +L1

Electrical Panel



Drill Four
6 mm Holes



Keep edge flush
with top of
enclosure



Keep edge flush
with right side
of enclosure

1" Scale Block

1100M/M+/MX PathPilot Operator Console Drill Template
To download/print this template, go to tormach.com/docs